


FLYWHEEL MAGNETO AND GENERATOR—DYNO-DISTRIBUTOR

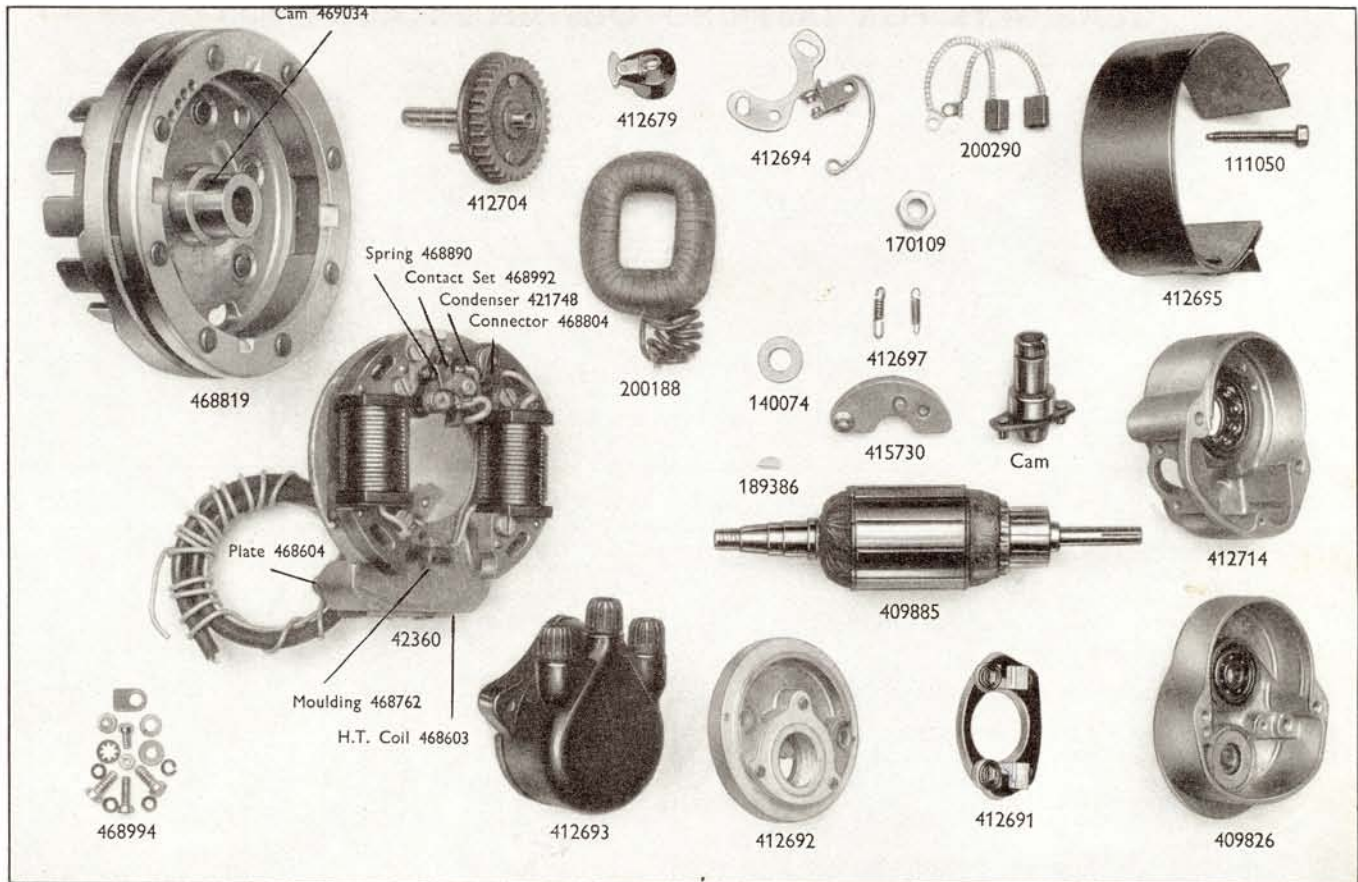

DETAILED SPARE PARTS

6F1 FLYWHEEL MAGNETO AND GENERATOR

Ordering No.	047525A
Model	6F1
Type	AC
Rotation	Clockwise
Flywheel assembly	468819
Cam	469034
§ Stator assembly	42360A/B
Spring, contact breaker	468890
Bush, insulating	468801
§ Contact set	468992
Lead, condenser to contact breaker	468686
Connector, condenser	468804
§ Condenser	421748
Cover, rubber, condenser	421569
Plate, coil retaining (left hand)	468604
Plate, coil retaining (right hand)	468763
Coil, high tension	468603
§ Moulding, insulating, high tension coil	468762
§ Sundry parts, set	468994
The 6F1 Flywheel Generator is fitted to the B.S.A. 'Dandy' 70 c.c. Scooter 1957	

DYNO-DISTRIBUTOR

Ordering No.	43752A/B
Model	E3KA2
Voltage	6
Rotation	Clock
Earth or Insulated Return	Earth
§ Cover, distributor	412693
§ Rotor arm	412679
§ Cam, housing and bearing	412714
§ Contact set	412694
§ Condenser	412689
§ Springs, set, auto-advance	412697
§ Weight, auto-advance	415730
§ Shaft and action plate	412704
§ Nut, shaft	170109
Washer, shaft nut	140074
§ Bracket or frame, drive end	412692
§ Bearing, drive end	189307
§ Key, Woodruff	189386
§ Cover band	412695
Screw, cover band fixing	111050
§ Bracket or frame, commutator end	409826
§ Bearing, commutator end	189210
Brushgear	412691
§ Springs, set, brush tension	200079
§ Brushes, set	200290
§ Armature	409885
§ Field coils	200188

§ Recommended spares for stock